







INSTRUCTIONS PERTAINING TO A RISK OF FIRE, OR INJURY TO PERSONS IMPORTANT SAFETY INSTRUCTIONS

Lighted fixture is HOT! WARNING - To reduce the risk of FIRE OR INJURY TO PERSONS:

Turn off/unplug and allow to cool before replacing lamp/LED. Fixture gets HOT quickly! Contact only switch/plug when turning on. Do not touch hot lens, guard, or enclosure. Keep fixture away from materials that may burn. Do not operate the luminaire fitting with a missing or damaged shield. Do not touch the source at any time. Use a soft cloth or gloves. Oil from skin may cause damage.

IMPORTANT SAFETY INFORMATION - READ, FOLLOW, AND SAVE ALL SAFETY AND INSTALLATION INSTRUCTIONS

- Product must be installed by a qualified person in a manner consistent with its intended use and in compliance with the National Electrical Code, Canadian Electrical Code, and all Local and Provincial Codes.
- Follow product label information and instructions
- · Qualified Personnel with appropriate personal protective equipment must perform all servicing of this product.
- Before wiring to power supply and during servicing, turn off and lock out power at fuse or circuit breaker before service
- The use of accessory equipment not recommended by the manufacturer or installed contrary to instructions may cause an unsafe condition. The use of damaged components may cause an unsafe condition and void product warranty.
- · Do not block light emanating from product in whole or part, as this may cause an unsafe condition.
- Never operate the fixture with missing or damaged lens. Lens must be cleaned on regular basis.
- · Entire fixture may become extremely hot. Do not touch hot lens or fixture body.
- · Replace LED assembly only with correct wattage and type of power supply appropriate for LED assembly.
- · All gaskets, o-rings and sealing surfaces must be kept clean during installation and service; failure to do this may cause an unsafe condition and void product warranty.


SAVE THESE INSTRUCTIONS

IMPORTANT LISTINGS AND CERTIFICATIONS

· Suitable for wet locations · Suitable for recessed in ground locations

Proper soil preparation is recommended before installation. See the DIG-IT quide at

www.bklighting.com/collaterals/install/digit.pdf for more information.

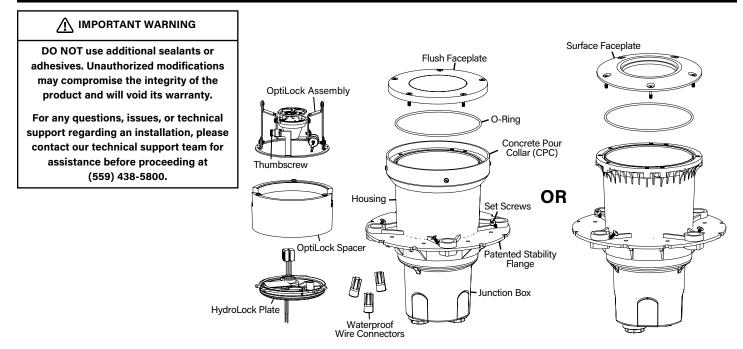

IMPORTANT SAFETY INFORMATION - READ, FOLLOW, AND SAVE THESE INSTALLATION INSTRUCTIONS

B-K LIGHTING


40429 Brickyard Drive • Madera, CA 93636 • USA RELEASE DATE REFERENCE NUMBER 559.438.5800 • FAX 559.438.5900 INS-2375-00 02/02/2024 www.bklighting.com • info@bklighting.com


THIS DOCUMENT CONTAINS PROPRIETARY INFORMATION OF B-K LIGHTING, INC. AND ITS RECEIPT OR POSSESSION DOES NOT CONVEY ANY RIGHTS TO REPRODUCE, DISCLOSE ITS CONTENTS, OR TO MANUFACTURE, USE OR SELL ANYTHING IT MAY DESCRIBE. REPRODUCTION, DISCLOSURE OR USE WITHOUT SPECIFIC WRITTEN AUTHORIZATION OF B-K LIGHTING, INC. IS STRICTLY FORBIDDEN



Soil Prep

1.

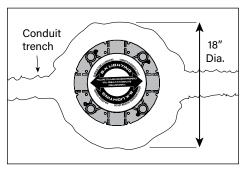

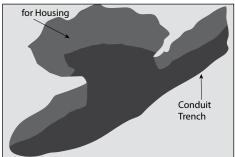


- Determine Soil Type by referencing DIG-IT Guide. 3. Prep soil a
- 2. Dig hole 18" wide and 18" deep.
- 3. Prep soil according to DIG-IT Guide.




SCAN WITH SMART DEVICE OR CLICK THE BAR CODE FOR ONLINE DIG-IT GUIDE


Housing Installation - (For use with Flush Faceplate)

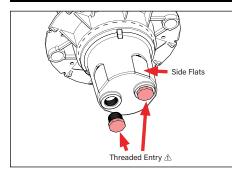


- Connect branch conduit connectors (not included) to the junction box using either the threaded conduit entries on the bottom of the junction box or through holes drilled into the sides of the junction box.
- A Remove 3/4" plug to install conduit connector. Any unused conduit entries should remain plugged.

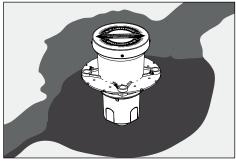


2. Place housing in hole. Align junction box in the path of the conduit trench.

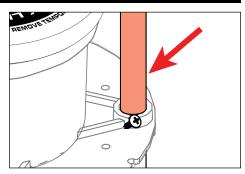


- Insert four (4) pieces of ½" PVC/EMT conduit through the stability flange. Hammer into substrate until secure.
- $\underline{\wedge}$ Leave sufficient clearance to elevate housing to finished grade.

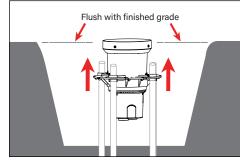

 Raise housing on PVC/EMT so housing is flush with finished grade. Use a level to aid in housing installation.

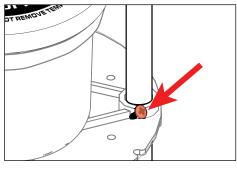

 When housing is level, tighten screws on stability flange to secure housing to PVC/EMT. Remove excess PVC/EMT as needed.

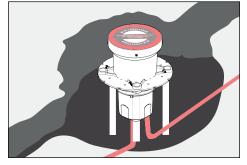

6. Pull primary branch circuit wiring into junction box.

IMPORTANT SAFETY INFORMATION LISTED ON REVERSE READ, FOLLOW, AND SAVE ALL SAFETY AND INSTALLATION INSTRUCTIONS




INS-2375-00

B-K LIGHTING


40429 Brickyard Drive • Madera, CA 93636 • USA 559.438.5800 • FAX 559.438.5900 www.bklighting.com • info@bklighting.com

RELEASE DATE 02/02/2024



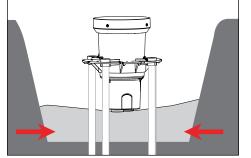


7. Per DIG-IT Guide, backfill hole based off of determined soil type.

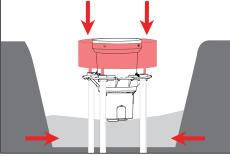


OPTIONAL GROUT MASK INSTALLATION (IF ORDERED)

 Fill partway, then place grout mask around housing, centered at faceplate. Insert stakes through stability flange. Top of grout mask should be flush with grade.

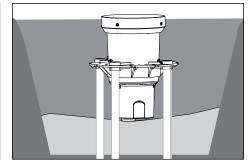


8. For soil installation: Fill and tamp soil to the appropriate height leaving room for sod, pavers, etc. to be level with the top of the temporary cover.

⚠ Soil installation is not drive-over rated.

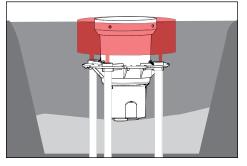


OPTIONAL GROUT MASK INSTALLATION (IF ORDERED)

- 8. For soil installation: Fill and tamp soil to the appropriate height leaving room for sod, pavers, etc. to be level with the top of the temporary cover.
- ⚠ Soil installation is not drive-over rated.

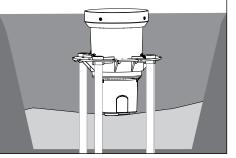

 For concrete installation: Fill the hole around the fixture housing to 7" below the finished grade with clean fill dirt and tamp carefully to prevent settling of fixture. Pour concrete and finish as required flush with the top surface of the temporary cover.

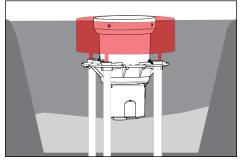

OPTIONAL GROUT MASK INSTALLATION (IF ORDERED)

 For concrete installation: Fill the hole around the fixture housing to 12" below the finished grade with clean fill dirt and tamp carefully to prevent settling of fixture. Pour concrete and finish as required flush with the top surface of the grout mask.

IMPORTANT SAFETY INFORMATION LISTED ON REVERSE READ, FOLLOW, AND SAVE ALL SAFETY AND INSTALLATION INSTRUCTIONS




B-K LIGHTING

40429 Brickyard Drive • Madera, CA 93636 • USA 559.438.5800 • FAX 559.438.5900 www.bklighting.com • info@bklighting.com RELEASE DATE 02/02/2024

REFERENCE NUMBER

Housing Installation - (For use with Surface Faceplate)

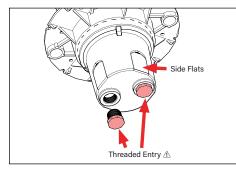


 Connect branch conduit connectors (not included) to the junction box using either the threaded conduit entries on the bottom of the junction box or through holes drilled into the sides of the junction box.


A Remove 3/4" plug to install conduit connector. Any unused conduit entries should remain plugged.




2. Place housing in hole. Align junction box in the path of the conduit trench.

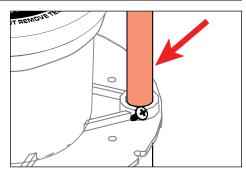


- Insert four (4) pieces of ½" EMT conduit through the stability flange. Hammer into substrate until secure.
- $\underline{\bigwedge}$ Leave sufficient clearance to elevate housing to finished grade.

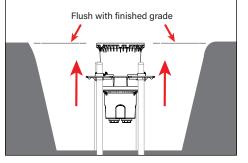


 Raise housing on EMT so housing is flush with finished grade. Use a level to aid in housing installation.

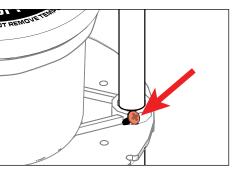


5. When housing is level, tighten screws on stability flange to secure housing to EMT. Remove excess EMT as needed.

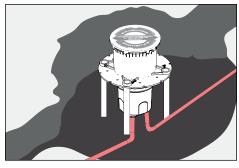


6. Pull primary branch circuit wiring into junction box.

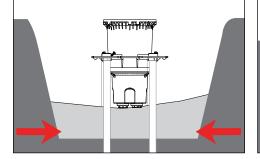

 Per DIG-IT Guide, backfill the gap between the bottom of housing and bottom of hole with sand for drainage.

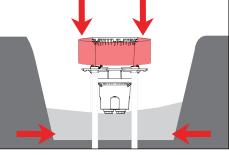

- OPTIONAL GROUT MASK INSTALLATION (IF ORDERED)
- Fill partway, then place grout mask around housing, centered at faceplate. Insert stakes through stability flange. Top of grout mask should be flush with grade.

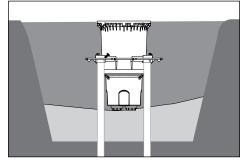

 For soil installation: Fill and tamp soil to the appropriate height leaving room for sod, pavers, etc. to be level with the top of the temporary cover.

⚠ Soil installation is not drive-over rated.

IMPORTANT SAFETY INFORMATION LISTED ON REVERSE READ, FOLLOW, AND SAVE ALL SAFETY AND INSTALLATION INSTRUCTIONS




INS-2375-00

B-K LIGHTING


40429 Brickyard Drive • Madera, CA 93636 • USA 559.438.5800 • FAX 559.438.5900 www.bklighting.com • info@bklighting.com RELEASE DATE 02/02/2024



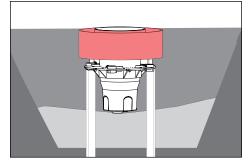


OPTIONAL GROUT MASK INSTALLATION (IF ORDERED)

- 8. For soil installation: Fill and tamp soil to the appropriate height leaving room for sod, pavers, etc. to be level with the top of the temporary cover.
- ⚠️ Soil installation is not drive-over rated.

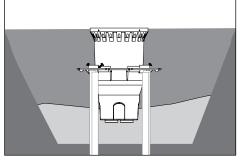

 For concrete installation: Fill the hole around the fixture housing to 12" below the finished grade with clean fill dirt and tamp carefully to prevent settling of fixture. Pour concrete and finish as required flush with the top surface of the temporary cover.

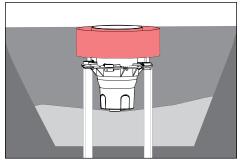


OPTIONAL GROUT MASK INSTALLATION (IF ORDERED)

 For concrete installation: Fill the hole around the fixture housing to 12" below the finished grade with clean fill dirt and tamp carefully to prevent settling of fixture. Pour concrete and finish as required flush with the top surface of the grout mask.


Installation



1. Remove temporary cover.

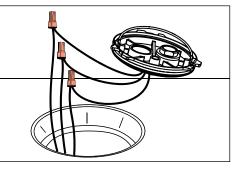


2. Make watertight connections using waterproof wire connectors (included) to leads on the bottom of Patented HydroLock Barrier Plate Assembly. See wiring diagram.

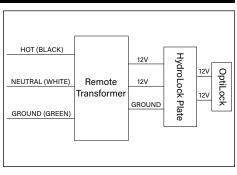


WIRING DIAGRAM


LED - For use with 12VAC LED remote transformer or magnetic transformers only. B-K Lighting cannot guarantee performance with third party manufacturers' transformers.

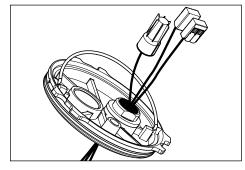

 Wipe inside of housing where HydroLock plate will sit clean of debris before inserting patented HydroLock plate on to junction box. Align HydroLock plate with pins in housing and seat it firmly in place.

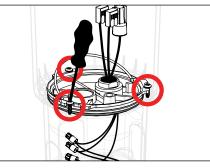

- 4. Turn HydroLock Barrier Plate clockwise ¼" to lock.
- ▲ Patented HydroLock Barrier Plate must be completely seated to ensure proper seal or water may intrude. This step must be done as stated or you will void your warranty.

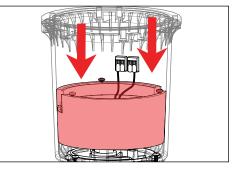

- 5. Lower optilock spacer into HP2 housing.
- ▲ Do not force into HP2 housing. Use caution to not pinch any wiring under the optilock spacer.
- Pull hydrolock secondary wiring towards top of HP2 housing.

US

REFERENCE NUMBER


INS-2375-00




B-K LIGHTING

40429 Brickyard Drive • Madera, CA 93636 • USA 559.438.5800 • FAX 559.438.5900 www.bklighting.com • info@bklighting.com RELEASE DATE 02/02/2024




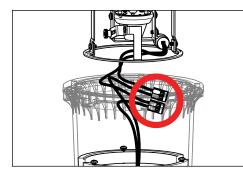


 Make connections using wago connectors 7. to Optilock assembly and hydrolock wiring. To connect, lift the lever on the wago, insert the conductor into opening, then snap the lever back down. Refer to Wiring diagram.

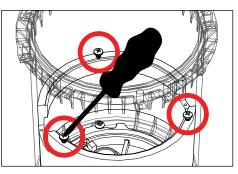


 If necessary, slightly loosen three (3) #8 screws using a phillips head screwdriver. Do not fully remove screws.

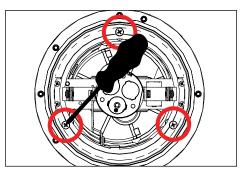


 Place OptiLock in HP2 housing and align keyhole notch under one of three (3) #8 screw heads. Rotate horizontally to desired aiming position, then tighten two (2) #8 phillips screws using phillips screwdriver.

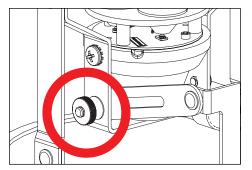


9. Aim vertically by turning the thumbscrew on OptiLock assembly.

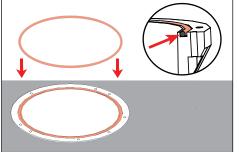

- 10. Remove any dirt or debris in o-ring groove near top of housing. Place o-ring inside of groove.
- \bigwedge Failure to clean groove of debris will cause fixture to fail and void product warranty.
- NOTE: See warning on page 1. Failure to comply with requirements will void warranty.

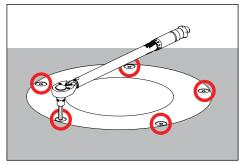

- 11a. (For use with flush faceplate) Install faceplate using a 1/8" allen wrench and hand-tighten the faceplate screws in a star pattern to 30 in-lbs. min.
- $\underline{\bigwedge}$ Do not use a power tool to install screws. Do not exceed 40 in-lbs.
- NOTE: See warning on page 1. Failure to comply with requirements will void warranty.

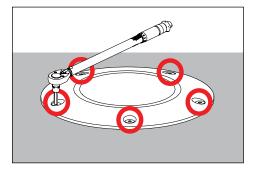

- 11b. (For use with surface faceplate) Install faceplate using a 1/8" allen wrench and hand-tighten the faceplate screws in a star pattern to 30 in-lbs. min.
- $\underline{\bigwedge}$ Do not use a power tool to install screws. Do not exceed 40 in-lbs.
- ▲ NOTE: See warning on page 1. Failure to comply with requirements will void warranty.



IMPORTANT SAFETY INFORMATION LISTED ON REVERSE READ, FOLLOW, AND SAVE ALL SAFETY AND INSTALLATION INSTRUCTIONS


B-K LIGHTING

40429 Brickyard Drive • Madera, CA 93636 • USA 559.438.5800 • FAX 559.438.5900 www.bklighting.com • info@bklighting.com


RELEASE DATE 02/02/2024

REFERENCE NUMBER




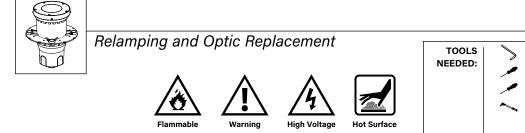

Relamping and/or Optic Replacement if Required for LED

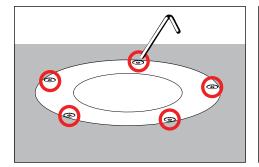

- Remove faceplate using a 1/8" allen wrench. 1.
- Space three fingers evenly around the optic and 2. gently rock optic to remove.

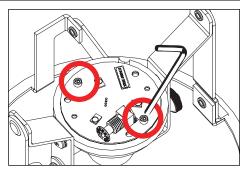


1/8" & 5/64" Allen Wrench

Small Flat Head Screwdriver


Phillips Screwdriver

Torque Wrench


3. Use a 5/64" allen wrench to remove two (2) #2-56 screws on LED board. Grasp LED board gently and expose quick disconnect. Disengage LED board from driver assembly.

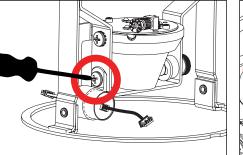


4. Use phillips screwdriver to loosen #8-32 phillips screw on driver bracket on OptiLock. Disconnect driver from fixture via quick disconnect. Replace old driver. Place new driver in bracket, then tighten #8-32 phillips screw to secure new driver to

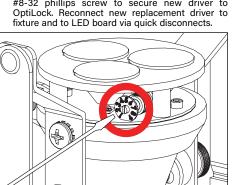


8. With flat head screw driver rotate Adjust-e-Lume dial to desired lumen output.

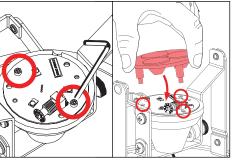


Secure LED board to heatsink by tightening two (2) #2-56 screws on LED board using a 5/64'' allen 5. wrench. Carefully snap optics back into tabs on LED board.

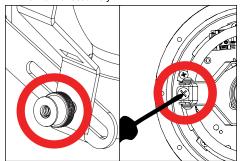

- 6. If OptiLock Has Thumbscrew Aim: Aim vertically by turning the thumbscrew on OptiLock assembly.
- 7. If OptiLock Has Tilt Assembly Aim: Aim vertically by turning the #10 phillips head screw on OptiLock assembly with phillips screwdriver.

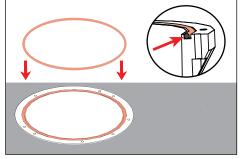

- 9. Remove any dirt or debris in o-ring groove near top of housing. Place o-ring inside of groove. Clean lens if needed.
- $\underline{\wedge}$ Failure to clean groove of debris will cause fixture to fail and void product warranty.

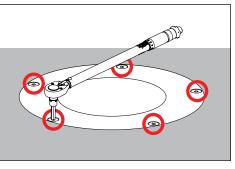

10. Install faceplate using a 1/8" allen wrench and hand-tighten the faceplate screws in a star pattern to 30 in-lbs, min.

Do not use a power tool to install screws. Do not ⚠ exceed 40 in-lbs.

IMPORTANT SAFETY INFORMATION - READ, FOLLOW, AND SAVE THESE INSTALLATION INSTRUCTIONS			
	40429 Brickyard Drive • Madera, CA 93636 • USA	RELEASE DATE	REFERENCE NUMBER



02/02/2024 INS000012 www.bklighting.com • info@bklighting.com

THIS DOCUMENT CONTAINS PROPRIETARY INFORMATION OF B-K LIGHTING, INC. AND ITS RECEIPT OR POSSESSION DOES NOT CONVEY ANY RIGHTS TO REPRODUCE, DISCLOSE ITS CONTENTS, OR TO MANUFACTURE, USE OR SELL ANYTHING IT MAY DESCRIBE. REPRODUCTION, DISCLOSURE OR USE WITHOUT SPECIFIC WRITTEN AUTHORIZATION OF B-K LIGHTING, INC. IS STRICTLY FORBIDDEN.



HP2-FLUSH FACEPLATE

FACEPLATE ACCESSORIES

Accessories Installation Instructionsn



TOOLS NEEDED: 1/8" & 7/64" Allen Wrench

Torque Wrench

INSTRUCTIONS PERTAINING TO A RISK OF FIRE, OR INJURY TO PERSONS IMPORTANT SAFETY INSTRUCTIONS

Lighted fixture is HOT! WARNING - To reduce the risk of FIRE OR INJURY TO PERSONS:

Turn off/unplug and allow to cool before replacing lamp/LED. Fixture gets HOT quickly! Contact only switch/plug when turning on. Do not touch hot lens, guard, or enclosure. Keep fixture away from materials that may burn. Do not operate the luminaire fitting with a missing or damaged shield. Do not touch the source at any time. Use a soft cloth or gloves. Oil from skin may cause damage.


SAVE THESE INSTRUCTIONS

- IMPORTANT SAFETY INFORMATION READ, FOLLOW, AND SAVE ALL SAFETY AND INSTALLATION INSTRUCTIONS
- Product must be installed by a qualified person in a manner consistent with its intended use and in compliance with the National Electrical Code, Canadian Electrical Code, and all Local and Provincial Codes.
- Follow product label information and instructions.
- Qualified Personnel with appropriate personal protective equipment must perform all servicing of this product.
- Before wiring to power supply and during servicing, turn off and lock out power at fuse or circuit breaker before service.
- The use of accessory equipment not recommended by the manufacturer or installed contrary to instructions may cause an unsafe condition. The use of damaged components may cause an unsafe condition and void product warranty.
- Do not block light emanating from product in whole or part, as this may cause an unsafe condition.
- Never operate the fixture with missing or damaged lens. Lens must be cleaned on regular basis.
- Entire fixture may become extremely hot. Do not touch hot lens or fixture body.
- Replace LED assembly only with correct wattage and type of power supply appropriate for LED assembly.
- All gaskets, o-rings and sealing surfaces must be kept clean during installation and service; failure to do this may cause an unsafe condition and void product warranty.


IMPORTANT LISTINGS AND CERTIFICATIONS

Suitable for wet locations · Additionally suitable for mounting within 4 ft. of the ground


Proper soil preparation is recommended before installation. See the DIG-IT guide at www.bklighting.com/collaterals/install/digit.pdf for more information.



Rock Guard with Optical Opening

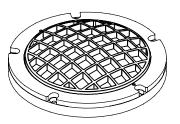


Rock Guard

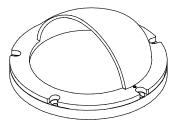

Half Dome B



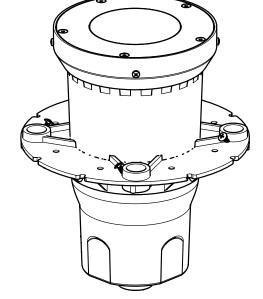

IMPORTANT SAFETY INFORMATION - READ, FOLLOW, AND SAVE THESE INSTALLATION INSTRUCTIONS



40429 Brickyard Drive • Madera, CA 93636 • USA 559.438.5800 • FAX 559.438.5900 www.bklighting.com • info@bklighting.com 02/02/2024 INS-2158-00

THIS DOCUMENT CONTAINS PROPRIETARY INFORMATION OF B-K LIGHTING, INC. AND ITS RECEIPT OR POSSESSION DOES NOT CONVEY ANY RIGHTS TO REPRODUCE, DISCLOSE ITS CONTENTS, OR TO MANUFACTURE, USE OR SELL ANYTHING IT MAY DESCRIBE. REPRODUCTION, DISCLOSURE OR USE WITHOUT SPECIFIC WRITTEN AUTHORIZATION OF B-K LIGHTING, INC. IS STRICTLY FORBIDDEN.



Faceplate Accessories

Instructions Apply To...






Rock Guard with Optical Opening

Rock Guard




Half Dome B


- Before installation of faceplate, clean o-ring groove 1. and collar of debris for a proper seal.
- \triangle Failure to remove debris from groove will cause fixture to fail and void product warranty.
- ▲ NOTE: See warning on page 1. Failure to comply with requirements will void warranty.

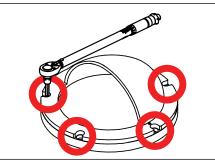


- Install faceplate using a 1/8" allen wrench and hand-tighten the five (5) #10-24 faceplate screws 2. in a star pattern to 30 in-lbs. min.
- $\underline{\wedge}$ Do not use a power tool to install screws. Do not exceed 40 in-lbs.
- NOTE: See warning on page 1. Failure to comply with requirements will void warranty. ⚠

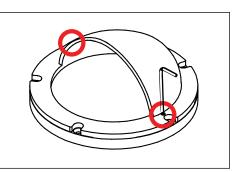

Using a 7/64" allen wrench, loosen the two (2) #6-32 set screws on the faceplate to allow 3. accessory to rotate freely.

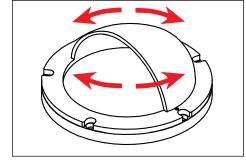

can rotate 360° independently of 5. 4. Accessory faceplate.

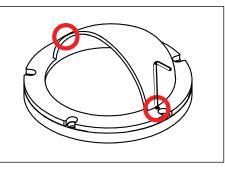

When set in final position, tighten two (2) #6-32 set screws using a 7/64" allen wrench.

IMPORTANT SAFETY INFORMATION LISTED ON REVERSE READ, FOLLOW, AND SAVE ALL SAFETY AND INSTALLATION INSTRUCTIONS



B-K LIGHTING

40429 Brickyard Drive • Madera, CA 93636 • USA 559.438.5800 • FAX 559.438.5900 www.bklighting.com • info@bklighting.com

RELEASE DATE 02/02/2024 REFERENCE NUMBER INS-2158-00

HP2-FLUSH FACEPLATE FACEPLATE ACCESSORIES