

# HUME

## INTEGRAL DRIVER - LED

### Standard Instructions



Flammable



Warning



High Voltage



Hot Surface

#### TOOLS NEEDED:



3/16" & 5/64" Allen Wrench



Waterproof Wire Connectors

### INSTRUCTIONS PERTAINING TO A RISK OF FIRE, OR INJURY TO PERSONS IMPORTANT SAFETY INSTRUCTIONS

#### Lighted fixture is HOT!

#### WARNING - To reduce the risk of FIRE OR INJURY TO PERSONS:

Turn off/unplug and allow to cool before replacing lamp/LED. Fixture gets HOT quickly! Contact only switch/plug when turning on. Do not touch hot lens, guard, or enclosure. Keep fixture away from materials that may burn. Do not operate the luminaire fitting with a missing or damaged shield. Do not touch the source at any time. Use a soft cloth or gloves. Oil from skin may cause damage.

**SAVE THESE INSTRUCTIONS**

### IMPORTANT SAFETY INFORMATION - READ, FOLLOW, AND SAVE ALL SAFETY AND INSTALLATION INSTRUCTIONS


- Product must be installed by a qualified person in a manner consistent with its intended use and in compliance with the National Electrical Code, Canadian Electrical Code, and all Local and Provincial Codes.
- Follow product label information and instructions.
- Qualified Personnel with appropriate personal protective equipment must perform all servicing of this product.
- Before wiring to power supply and during servicing, turn off and lock out power at fuse or circuit breaker before service.
- The use of accessory equipment not recommended by the manufacturer or installed contrary to instructions may cause an unsafe condition. The use of damaged components may cause an unsafe condition and void product warranty.
- Do not block light emanating from product in whole or part, as this may cause an unsafe condition.
- Never operate the fixture with missing or damaged lens. Lens must be cleaned on regular basis.
- Entire fixture may become extremely hot. Do not touch hot lens or fixture body.
- Replace LED assembly only with correct wattage and type of power supply appropriate for LED assembly.
- All gaskets, o-rings and sealing surfaces must be kept clean during installation and service; failure to do this may cause an unsafe condition and void product warranty.

### IMPORTANT LISTINGS AND CERTIFICATIONS

- Suitable for wet locations


## HU - Hume

### Rear Knuckle Hume

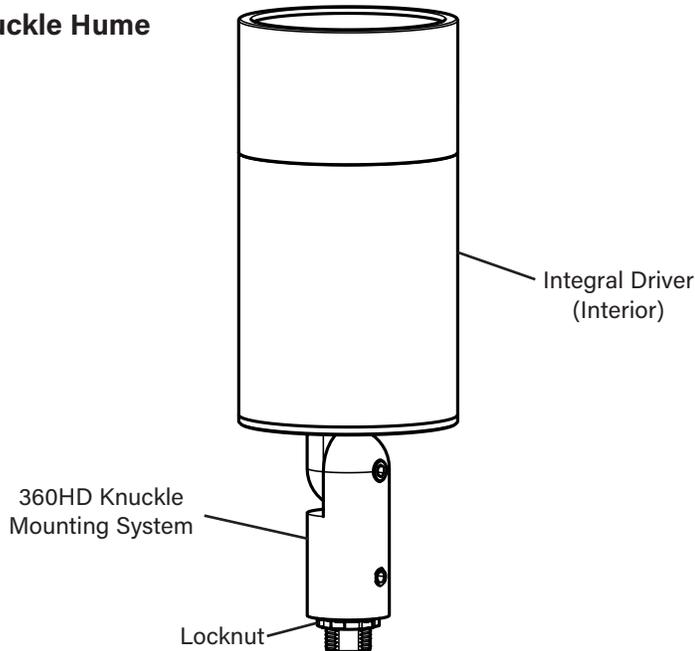

**FIXTURE MUST BE  
MOUNTED TO UL  
LISTED JUNCTION  
BOX OR ENCLOSURE**

### Side Knuckle Hume

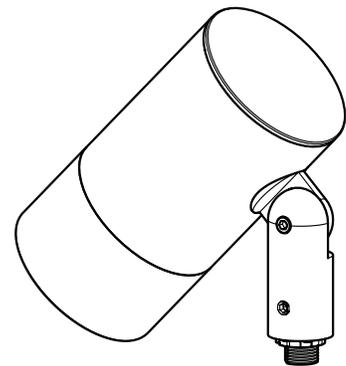

### IMPORTANT SAFETY INFORMATION - READ, FOLLOW, AND SAVE THESE INSTALLATION INSTRUCTIONS


# B-K LIGHTING

40429 Brickyard Drive • Madera, CA 93636 • USA  
559.438.5800 • FAX 559.438.5900  
www.bklighting.com • info@bklighting.com

RELEASE DATE  
04/20/2023




REFERENCE NUMBER  
INS-2817-00

THIS DOCUMENT CONTAINS PROPRIETARY INFORMATION OF B-K LIGHTING, INC. AND ITS RECEIPT OR POSSESSION DOES NOT CONVEY ANY RIGHTS TO REPRODUCE, DISCLOSE ITS CONTENTS, OR TO MANUFACTURE, USE OR SELL ANYTHING IT MAY DESCRIBE. REPRODUCTION, DISCLOSURE OR USE WITHOUT SPECIFIC WRITTEN AUTHORIZATION OF B-K LIGHTING, INC. IS STRICTLY FORBIDDEN.

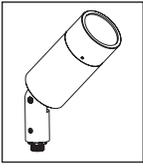

*Standard Instructions*

**Fixture Installation**

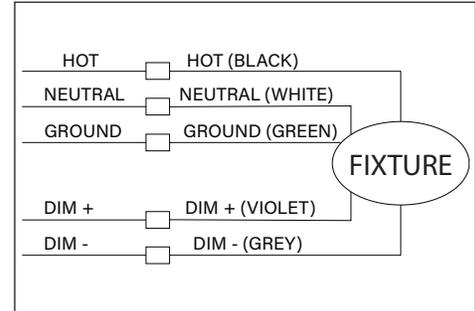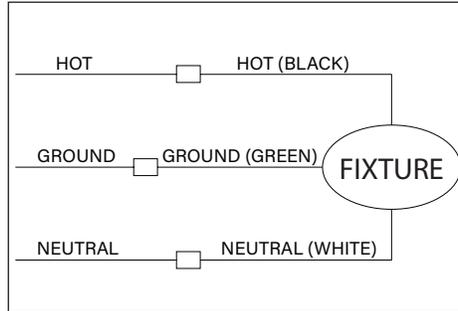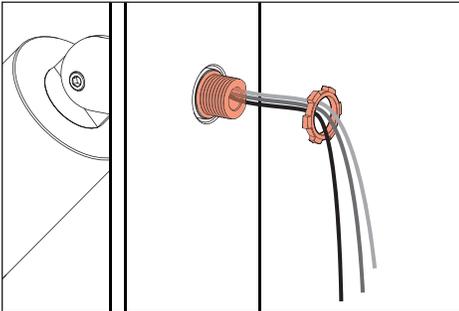

1. Mount knuckle onto suitable enclosure according to designed lighting plan.

**⚠ Fixture must be mounted to UL Listed Junction Box or Enclosure.**

2. Secure 1/2" NPS stem to mounting option. Secure with provided locknut if applicable.




**WIRING DIAGRAM**

3. Pull branch circuit wiring. Make watertight connections from branch circuit wiring to fixture leads using waterproof wire connectors (not included) in splice location as per NEC. UL Listed splice location required. Connect incoming green ground wire to ground wire from fixture. **See wiring diagram.**

**⚠ All line voltage connections must be made in compliance with the National Electrical Code. Failure to do so will void warranty.**

**WIRING DIAGRAM (0-10)**

**360HD Knuckle Mounting System**

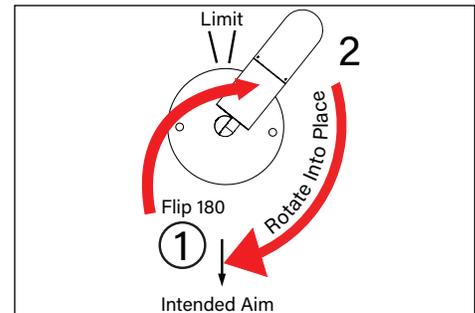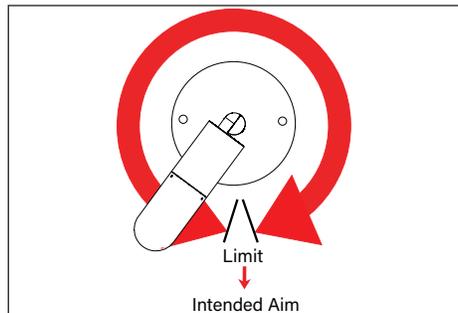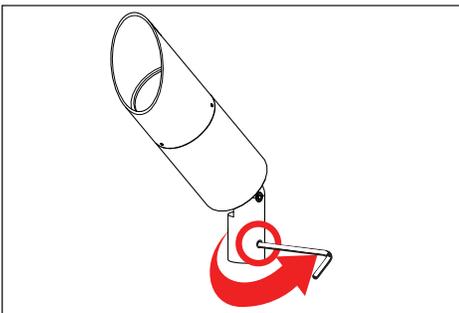

1. Use a 3/16" allen wrench to slightly loosen one (1) 3/8"-16 set screw on the knuckle for 360° aiming purpose.

2. Rotate fixture at base and aim fixture to desired horizontal location.

3. If the over-rotation protection pin is in the desired aiming position, do not force the fixture past the limit. Using a 3/16" allen wrench, slightly loosen both set screws in the knuckle, enough to move the fixture freely on both axes.

4. Flip the fixture 180 degrees over the knuckle. The rotational range limit will now be 180 degrees from the original position. Now rotate the fixture into the desired aiming position.


5. Secure aim by tightening one (1) 3/8"-16 set screw using a 3/16" allen wrench.

**⚠ Rotating the cap may be necessary for proper weep hole and cutoff position**

**⚠ Warning: Do not over tighten cap set screws. Doing so will compromise o-ring seal and will void warranty.**

**IMPORTANT SAFETY INFORMATION LISTED ON REVERSE  
READ, FOLLOW, AND SAVE ALL SAFETY AND INSTALLATION INSTRUCTIONS**



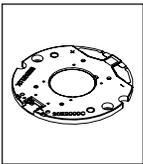

## Standard Instructions

# HUME

## INTEGRAL DRIVER - LED



Warning




Hot Surface


### TOOLS NEEDED:

-  5/64" Allen Wrench
-  Small Pick Tool
-  Thermal Paste (Supplied)
-  Small Phillips Screwdriver


## To Replace LED

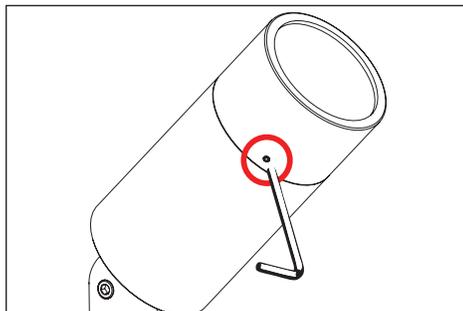


- Loosen three (3) #8-32 set screws on the cap by using a 5/64" allen wrench. Do not remove set screws. firmly pull on the cap to remove.

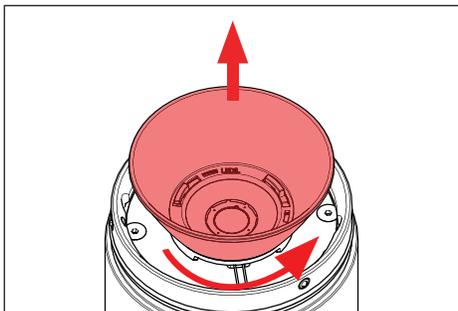

- Remove optic by twisting to unlock optic from optic holder tabs, and lift up.

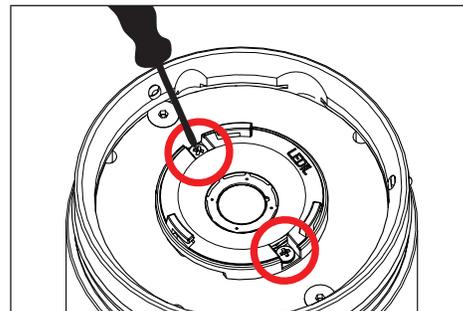


- Unscrew two (2) #4-40 phillips fasteners on optic holder using phillips screwdriver. Grasp optic holder and gently pull upward to remove.

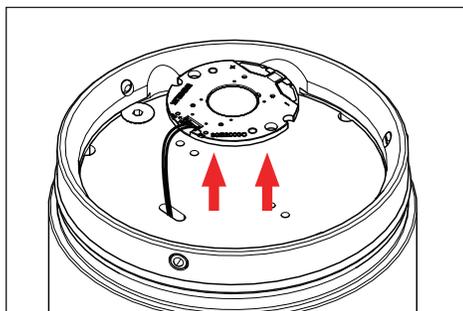


- Carefully remove LED module from heatsink.

**⚠ Do not pull on connector or wiring. Handle with care.**

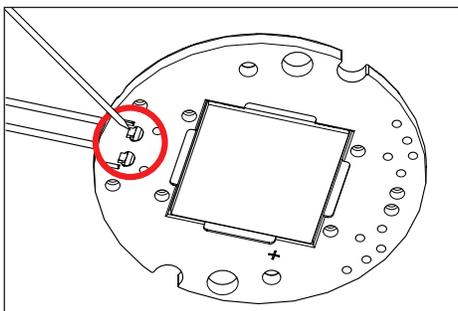


- Use small pick tool to push connector off LED board through two small slots behind connector. Once loose, lift connector upwards and off board.

**⚠ Fragile! Do not pull on connector or wiring. Handle with care.**

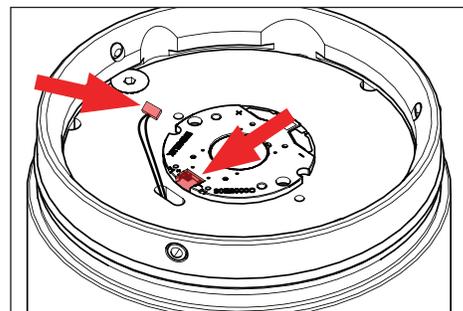


- Spread thin, even layer of thermal paste on back of new LED module. Place new LED module onto heatsink, lining up module with holes for screws. Press connector straight downwards into slot on module to snap into place.


**⚠ Connector will only fit in one direction.**

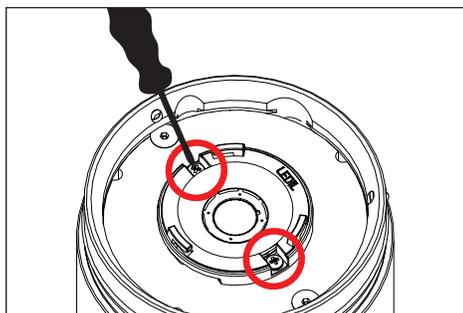

- Tighten two (2) #4-40 screws using phillips screwdriver to secure optic holder over LED module.

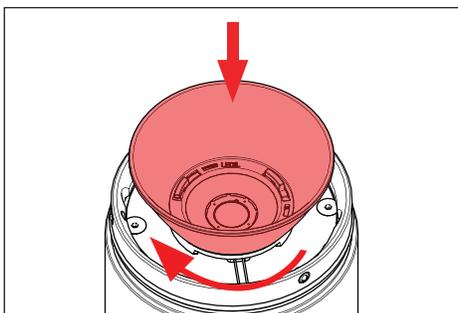

- Reverse install optic.

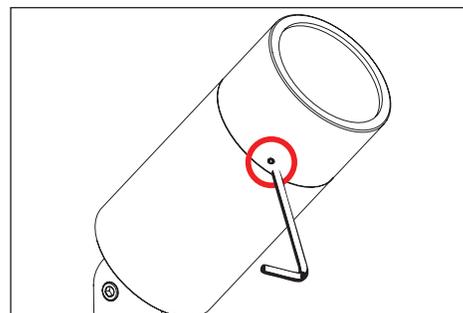

- Install cap on by tightening the three (3) #8-32 set screws by using a 5/64" allen wrench.

**⚠ Warning: Do not over tighten set screw. Doing so will compromise o-ring seal and will void warranty. Cap should be able to rotate without force.**


## IMPORTANT SAFETY INFORMATION - READ, FOLLOW, AND SAVE THESE INSTALLATION INSTRUCTIONS

# B-K LIGHTING

40429 Brickyard Drive • Madera, CA 93636 • USA  
559.438.5800 • FAX 559.438.5900  
www.bklighting.com • info@bklighting.com

RELEASE DATE  
04/20/2023

REFERENCE NUMBER  
INS-2783-10

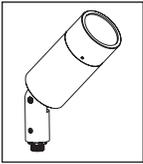


## Standard Instructions


# HUME

INTEGRAL DRIVER - LED


### Integral Driver Replacement

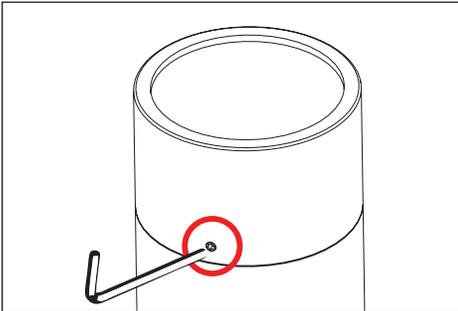


1. Loosen three (3) #8-32 set screws on the cap by using a 5/64" allen wrench. Do not remove set screws, firmly pull on the cap to remove.

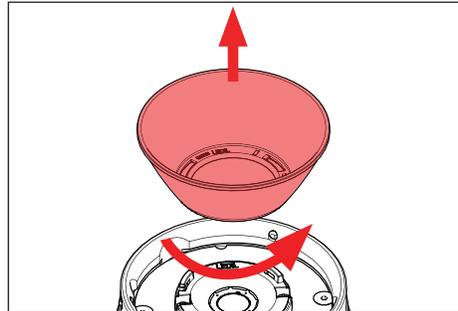

2. Twist and pull away optic.

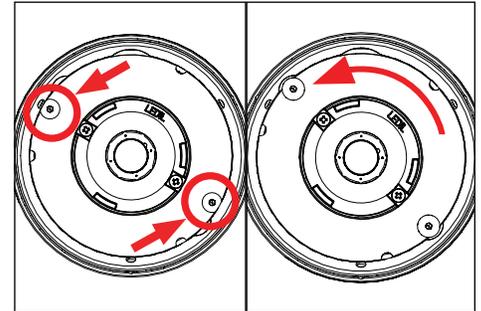


3. Disengage the heatsink by tightening the two (2) #8-32 flat head screws by using a 3/32" allen wrench. Rotate the heatsink to align the screws with slots to remove.

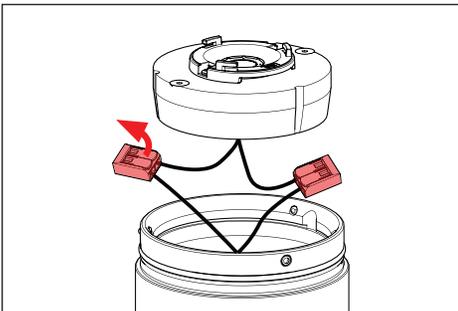


4. Lift lever on the wago connector to remove LED leads.


5. Separate heatsink from driver assembly via quick disconnect.

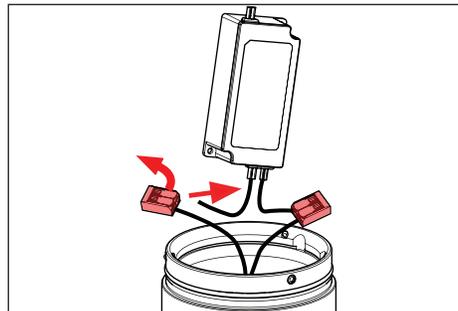


6. Remove driver from fixture via quick disconnect. Replace with the new driver and reinstall into fixture.

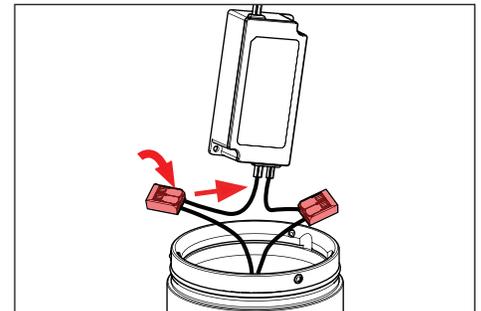


7. Reconnect heatsink assembly to driver assembly via quick disconnect. Quick disconnect tucks into space underneath heatsink.

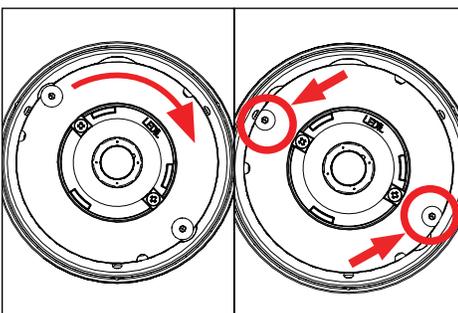

8. Align the flat head screws with slots in the fixture and reinstall the heatsink back on. Rotate the heatsink into place and loosen the two (2) #8-32 flat head screws using a 3/32" allen wrench to engage heatsink.

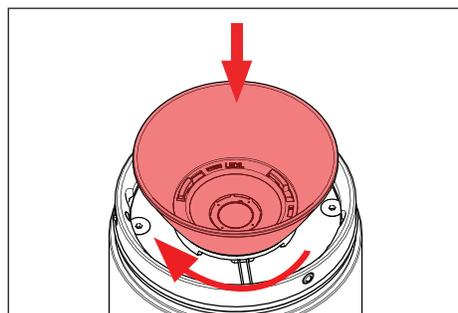

9. Twist to reinstall optic onto optic holder.

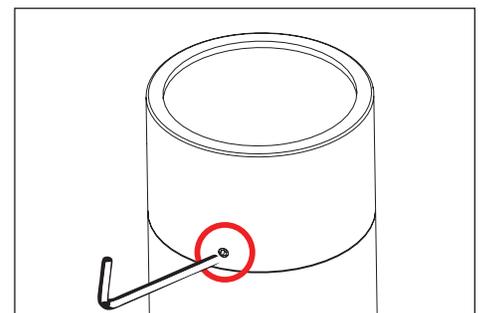

10. Install the cap on by tightening three (3) #8-32 set screws by using a 5/64" allen wrench. **Do not over tighten. Cap should be able to rotate without force.**

**IMPORTANT SAFETY INFORMATION LISTED ON REVERSE  
READ, FOLLOW, AND SAVE ALL SAFETY AND INSTALLATION INSTRUCTIONS**



# B-K LIGHTING

40429 Brickyard Drive • Madera, CA 93636 • USA  
559.438.5800 • FAX 559.438.5900  
www.bklighting.com • info@bklighting.com

RELEASE DATE  
04/20/2023

REFERENCE NUMBER  
INS-2817-00